
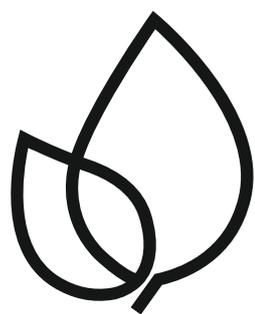



Основание Raibox с ПМ 160, 180, 200

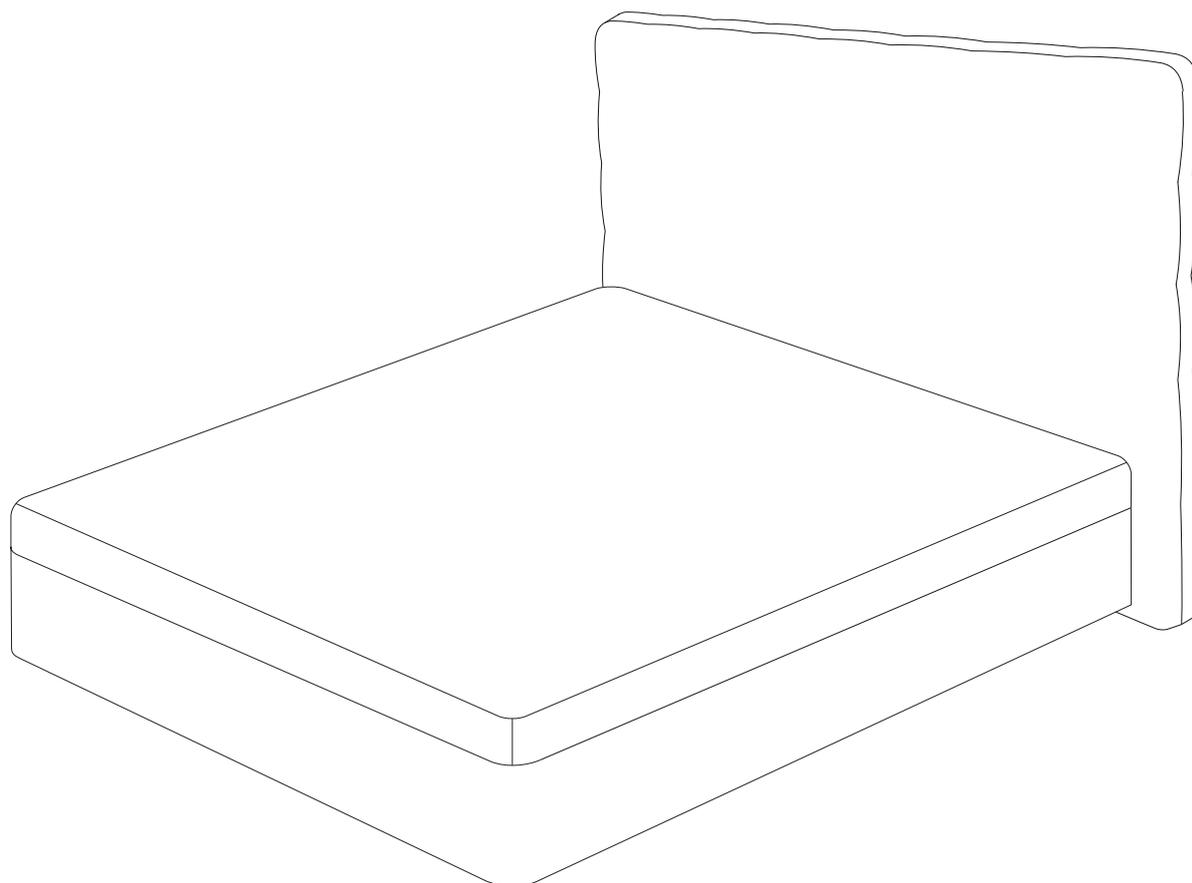


Раїтон
кроватьи и матрасы










- Φ1** M6x20 0613068 44x
- Φ2** M6x30 потайи 0335351 20x
- Φ3** M6x30 0611669 12x
- Φ4** M6x35 0610630 8x
- Φ5** M6x45 0611790 16x
- Φ6** M6x60 0612281 8x
- Φ7** MAXIFIX M8 0865753 4x
- Φ8** 8x30 0608285 2x
- Φ9** M6 4x
- Φ10** M8 0715286 4x
- Φ13** d6 0255990 12x
- Φ14** d8 0612992 4x
- Φ15** 0608433 12x
- Φ16** 0609680 4x
- Φ17** 0610530 4x
- Φ18** 1029696 4x
- Φ19** 2x
- Φ20** 2x
- Φ21** 1x
- Φ22** 0610288 1x

П - 2 компл.

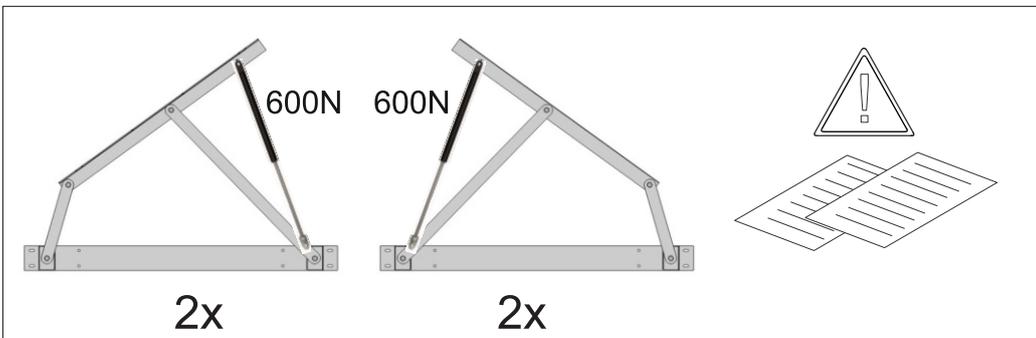

Р - 1 компл.

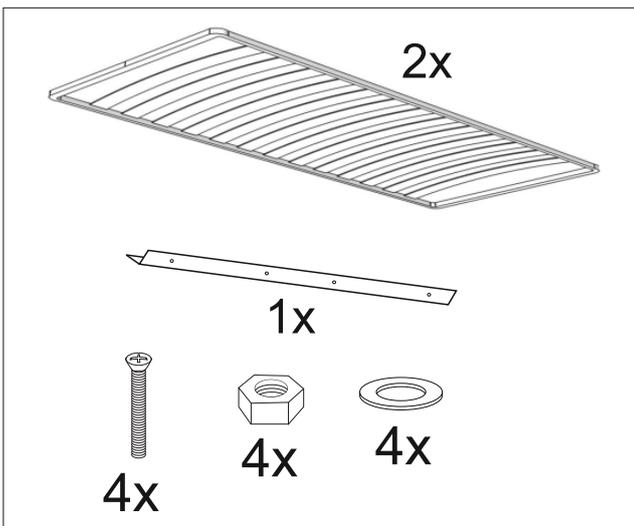

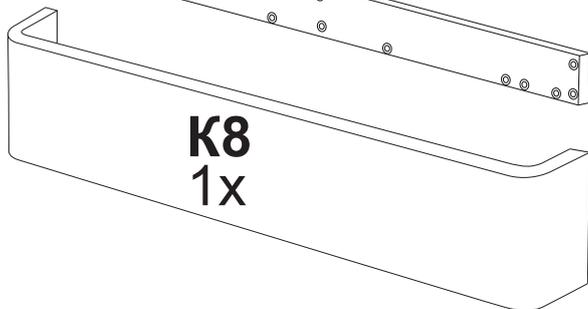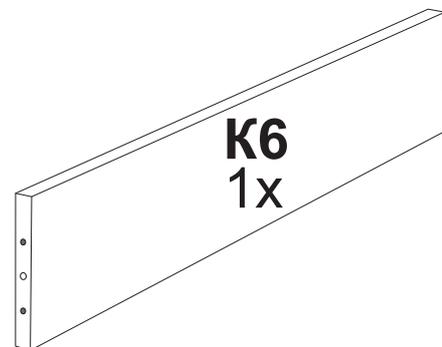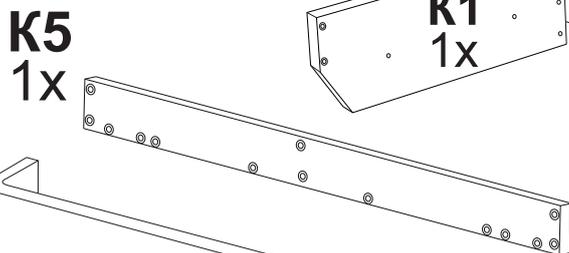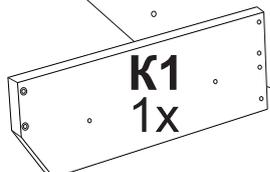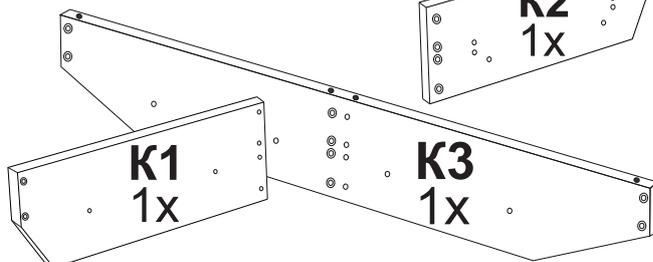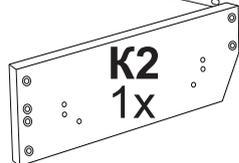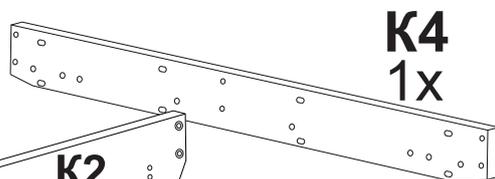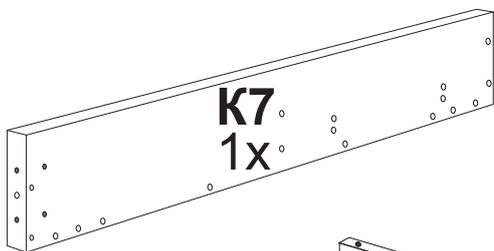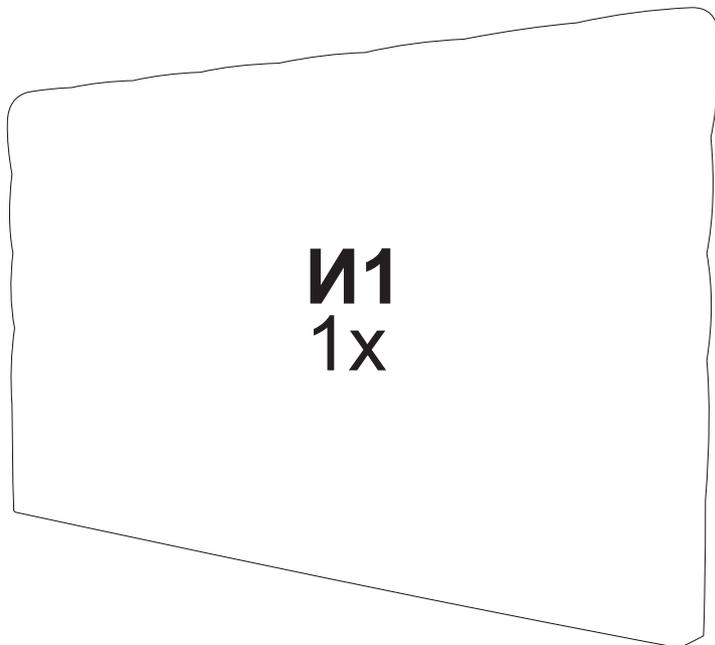


H1
4x




H2
12x





O1
4x

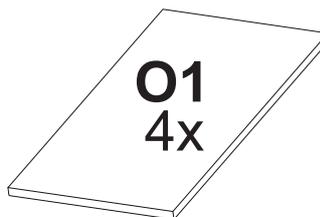

O2
4x

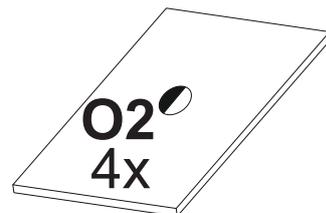


- ⊙ - гайка «УС»
- - гайки «УС» нет

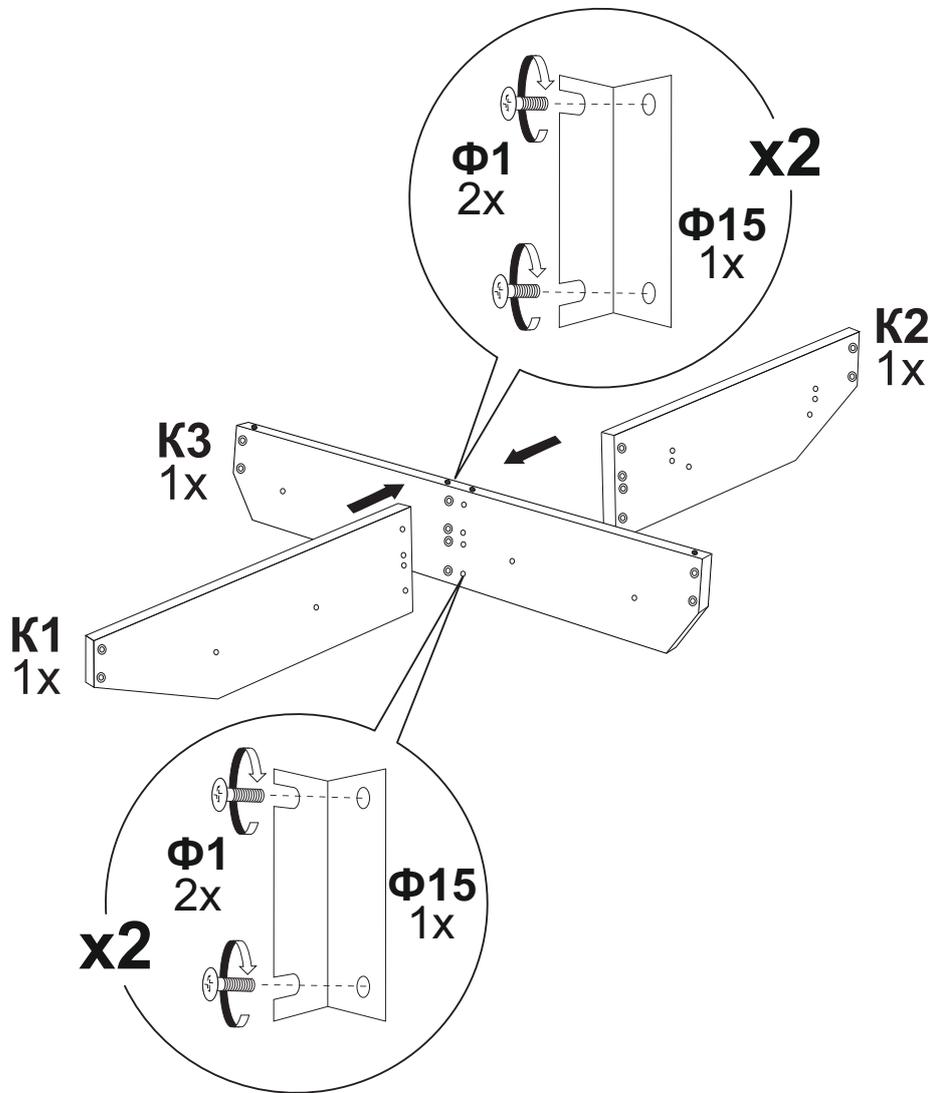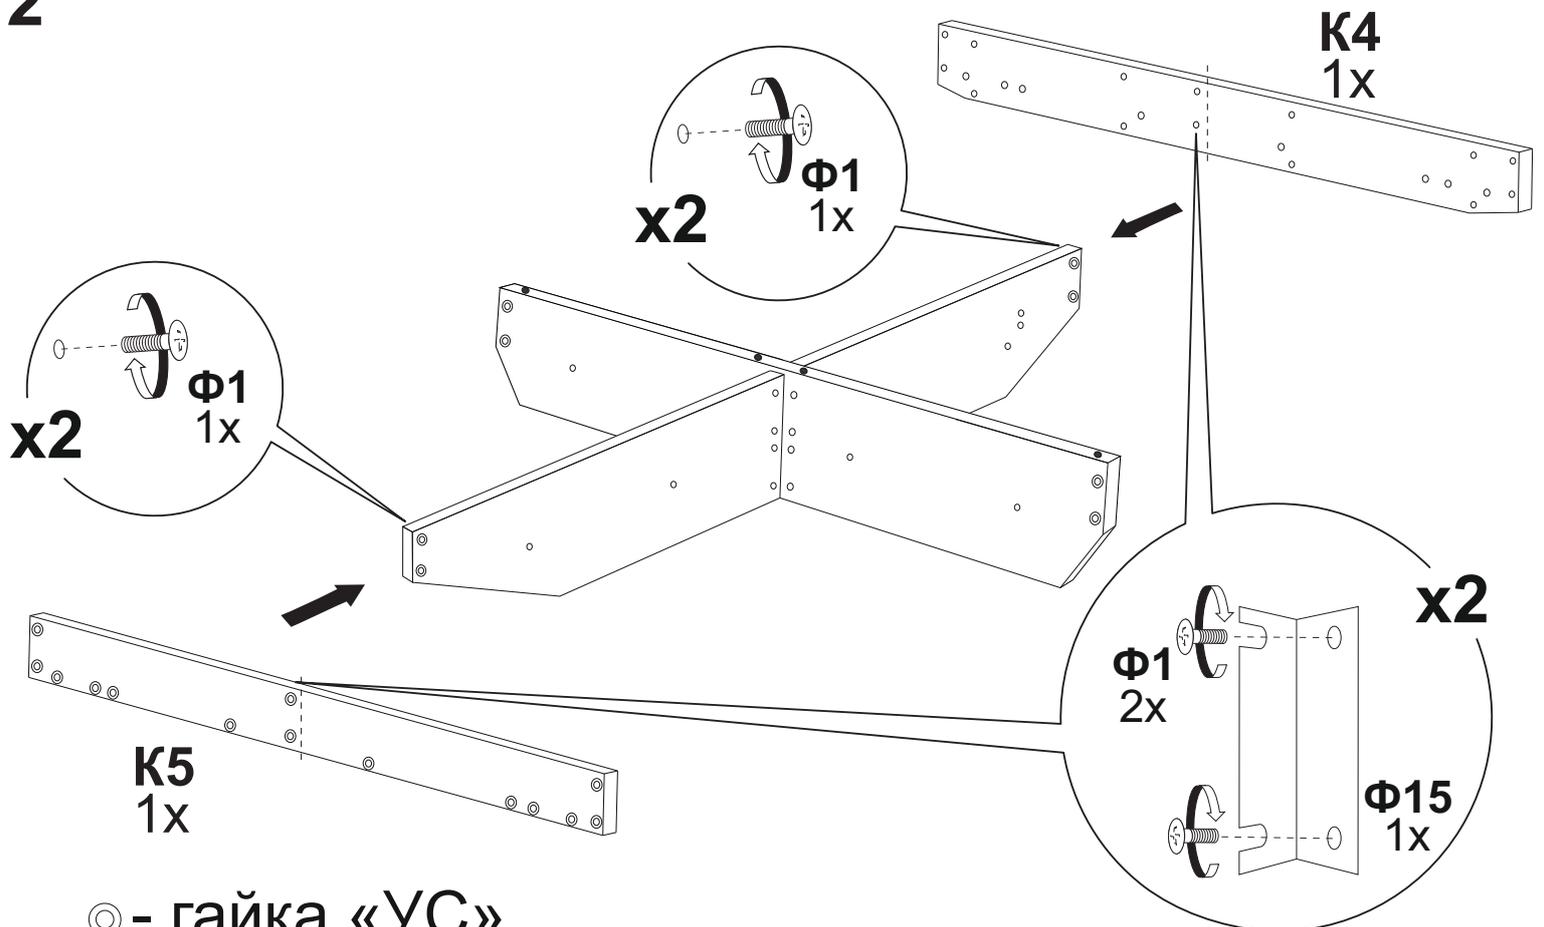1**2**


⊙ - гайка «УС»

○ - гайки «УС» нет

3

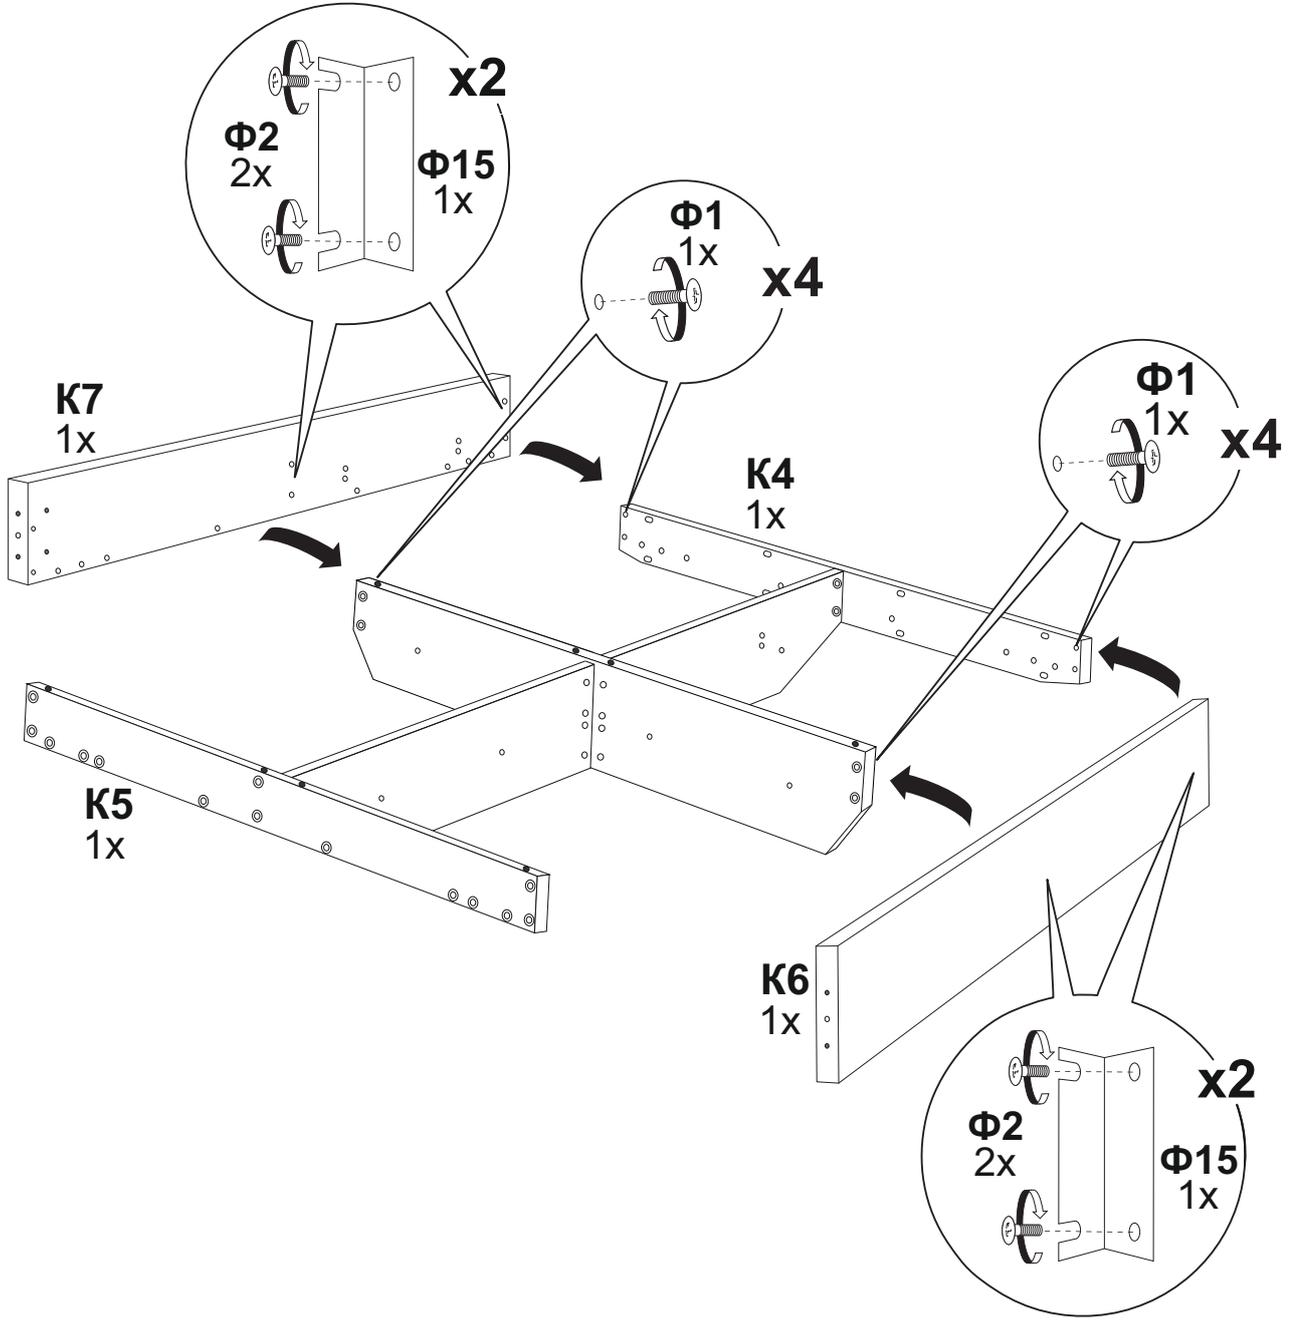


4

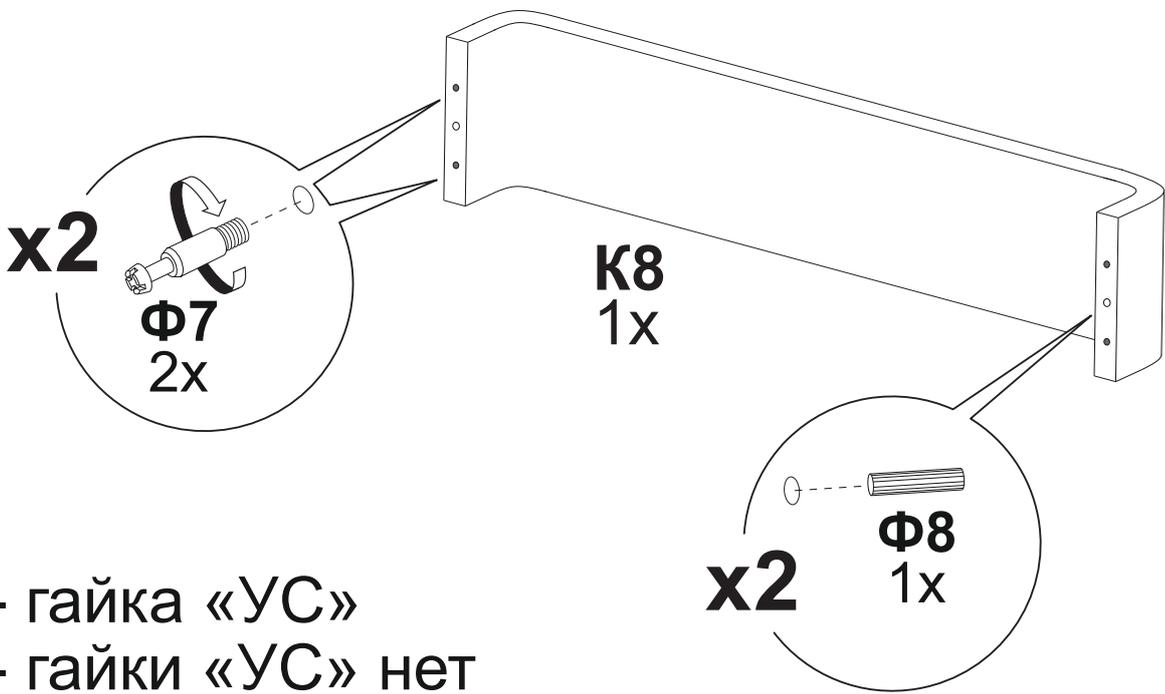


⊙ - гайка «УС»
 ○ - гайки «УС» нет

5

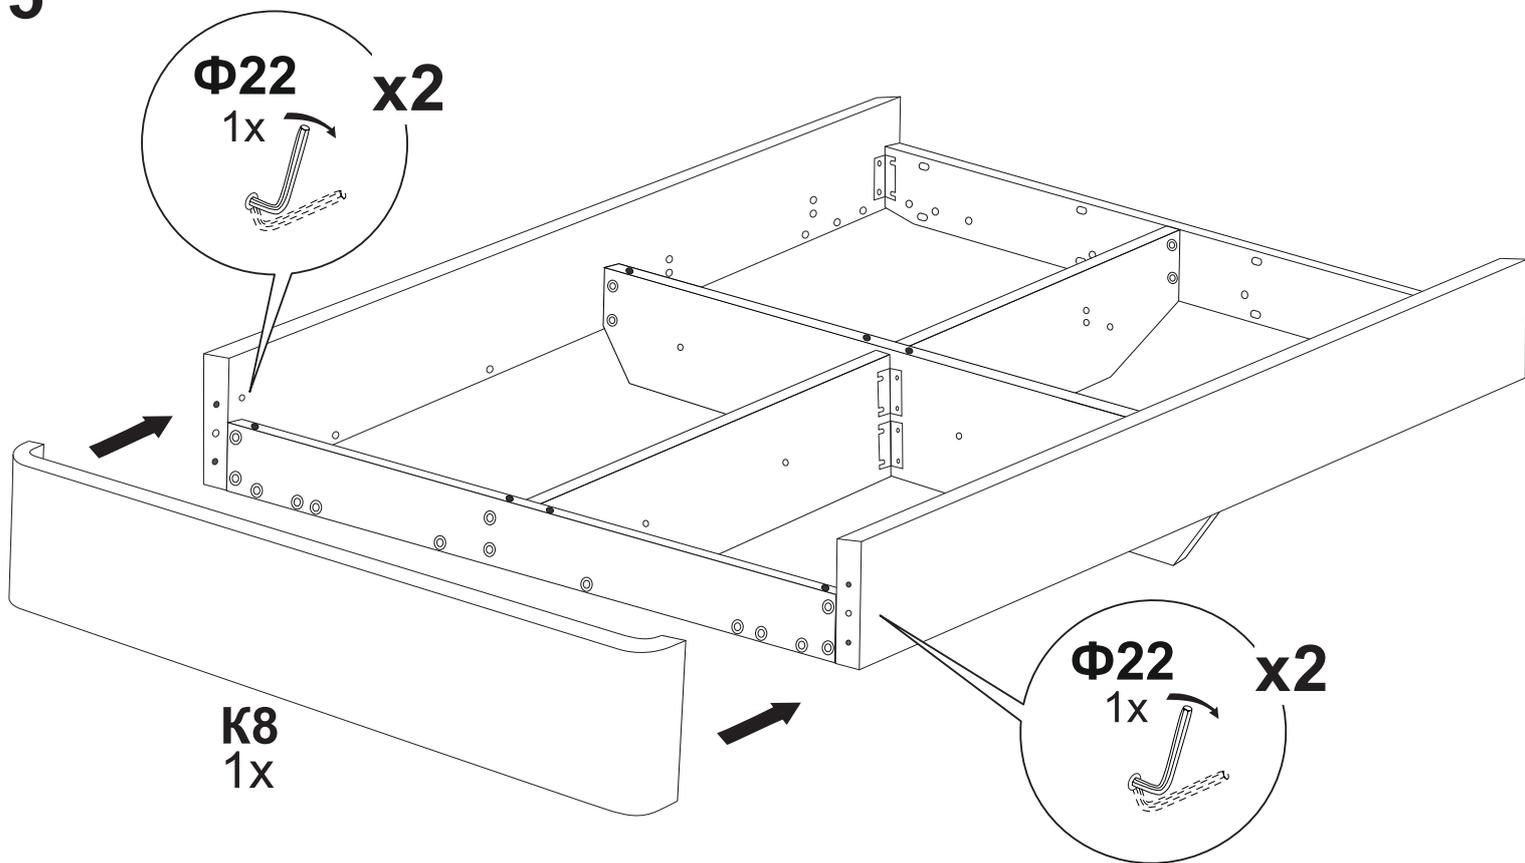


6

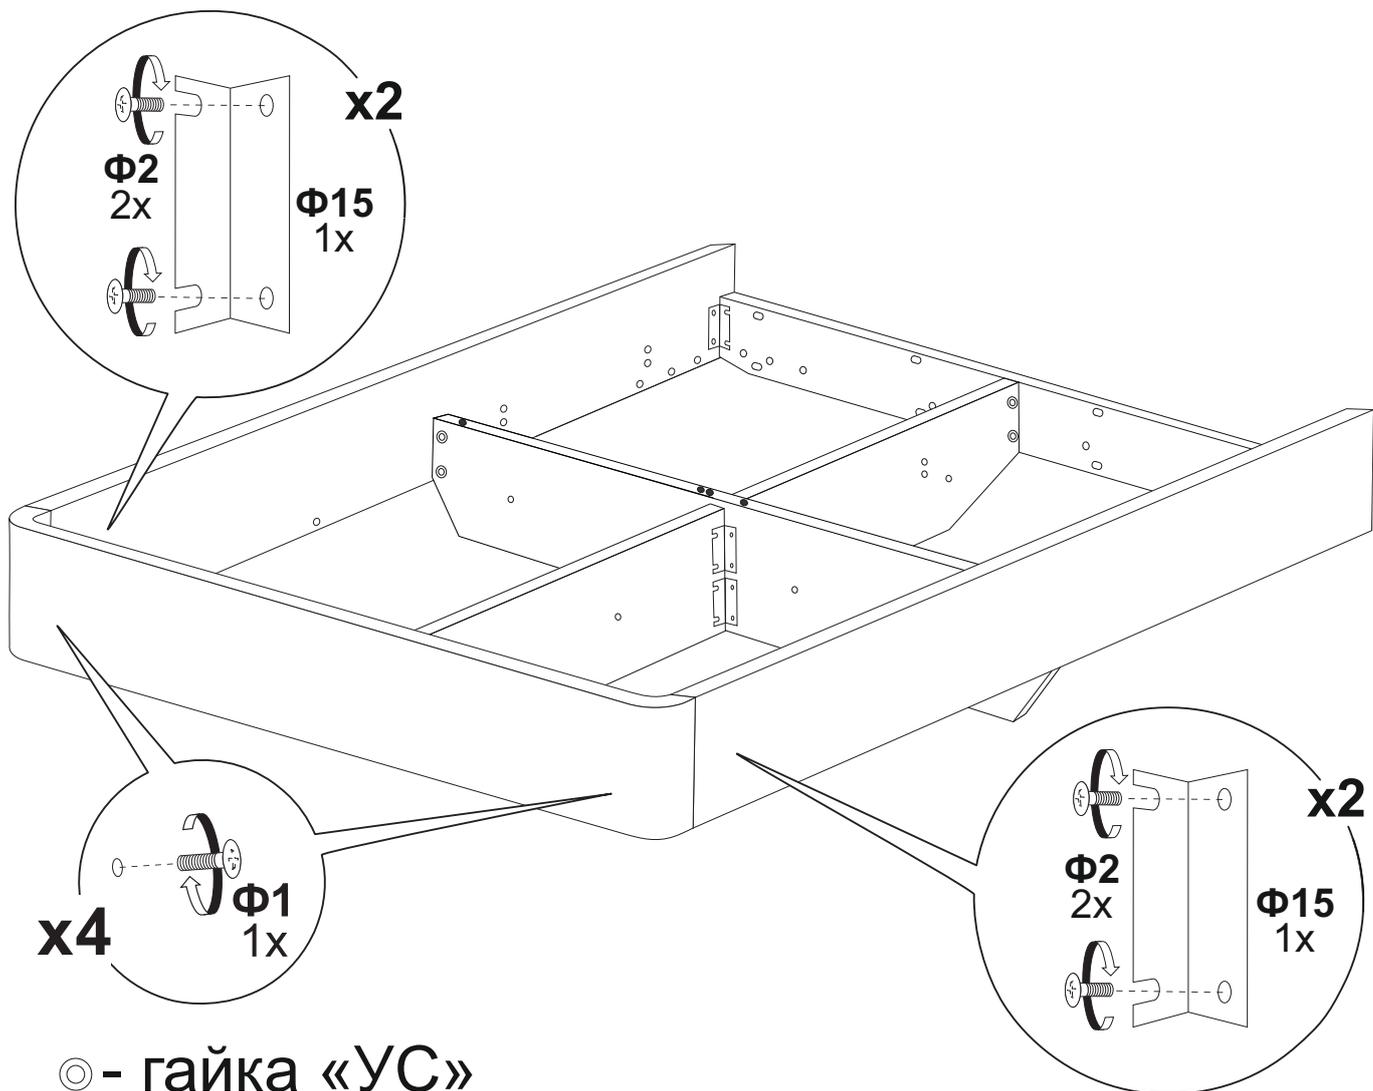


⊙ - гайка «УС»

○ - гайки «УС» нет

7

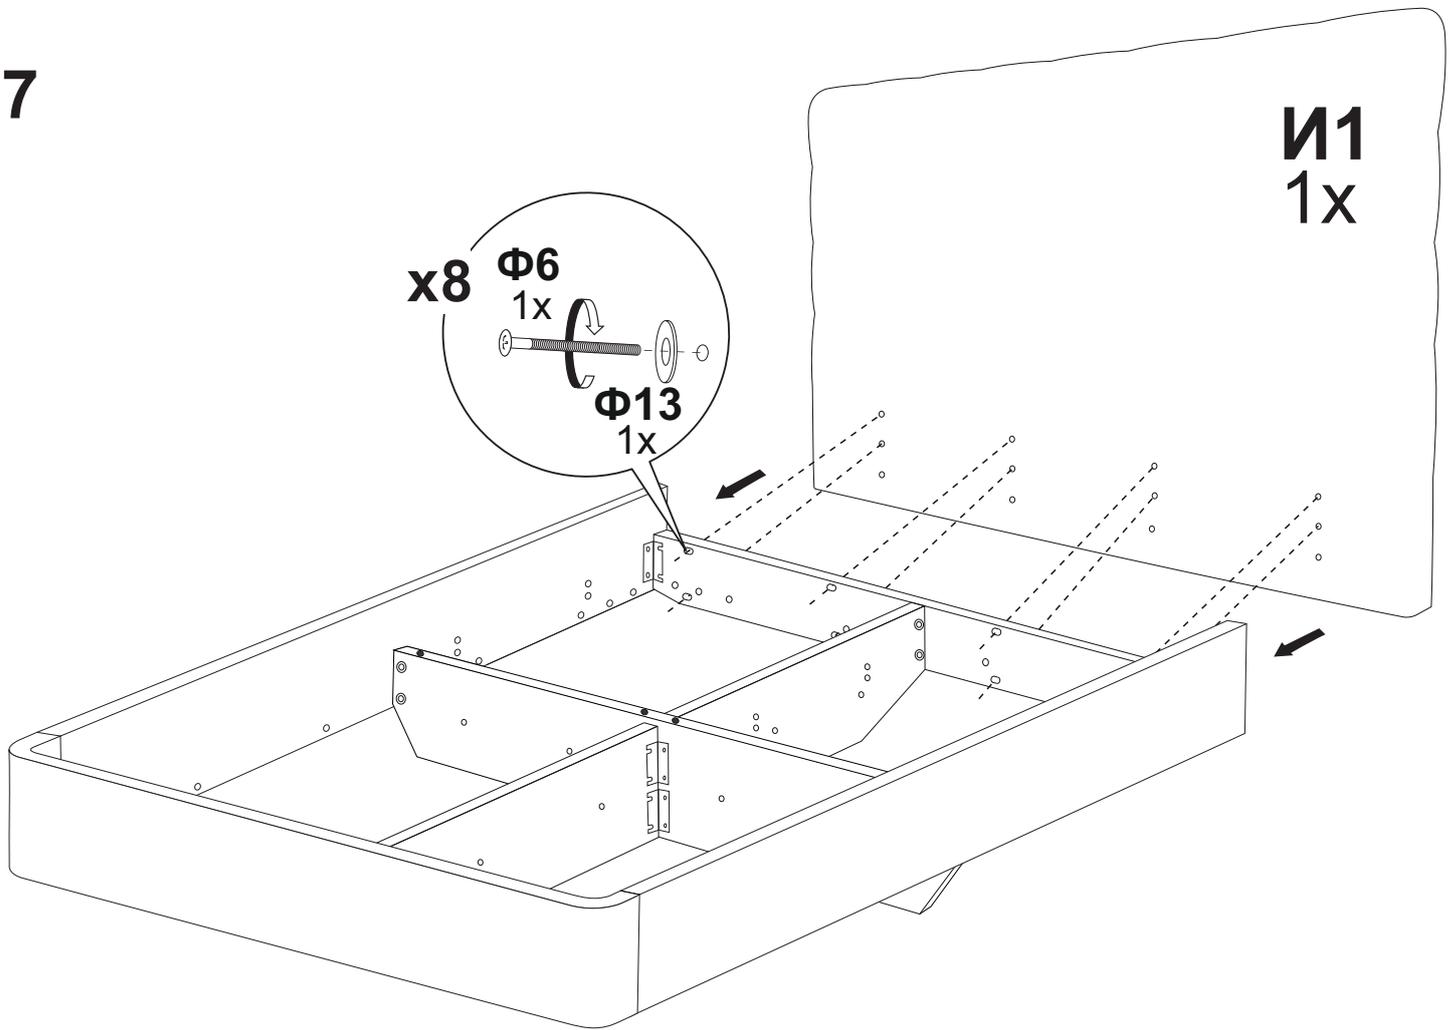


8

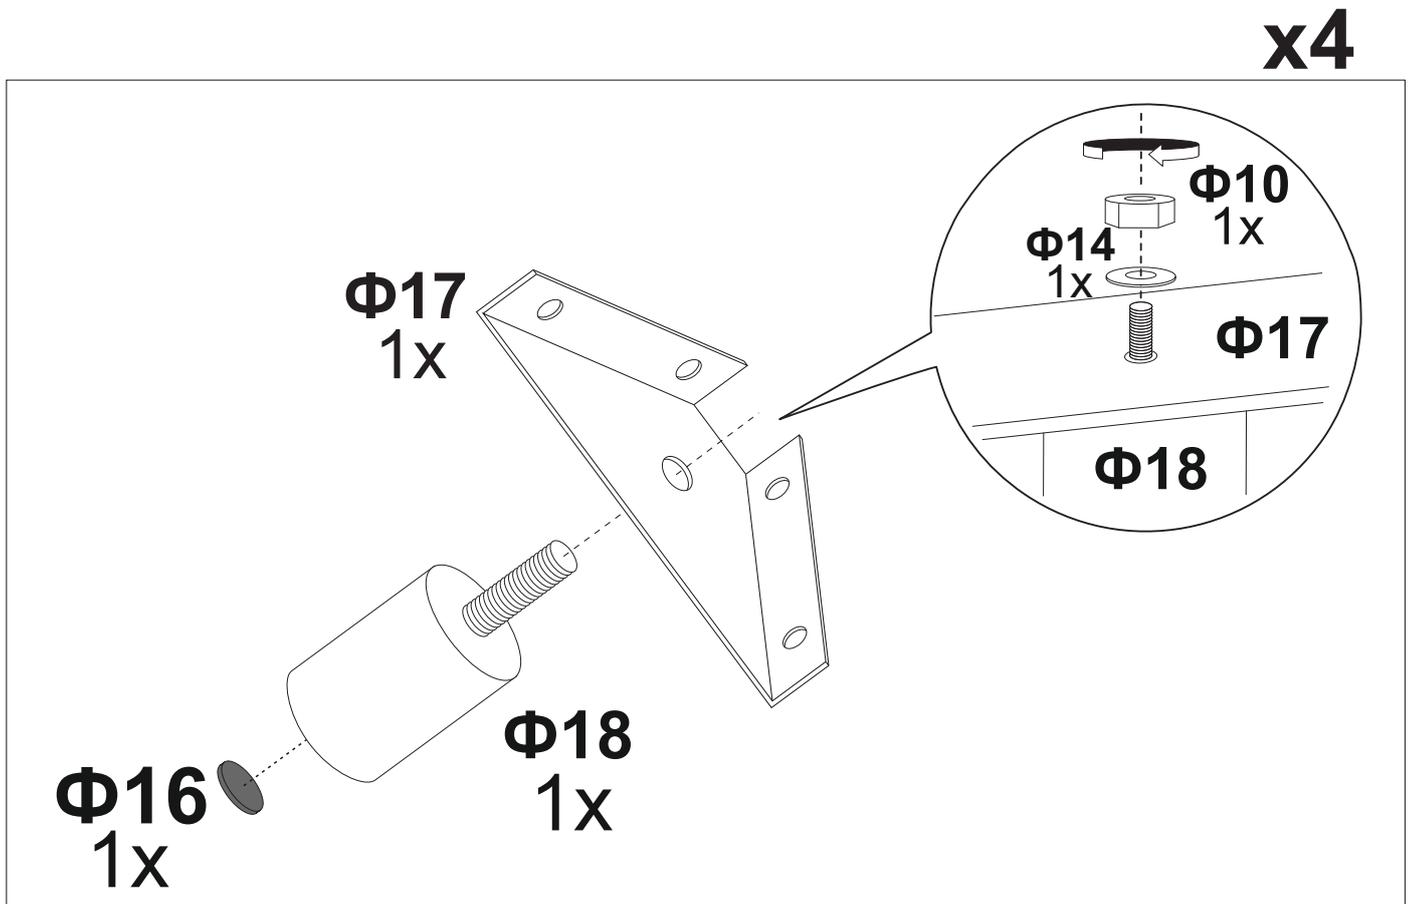


⊙ - гайка «УС»

○ - гайки «УС» нет

9

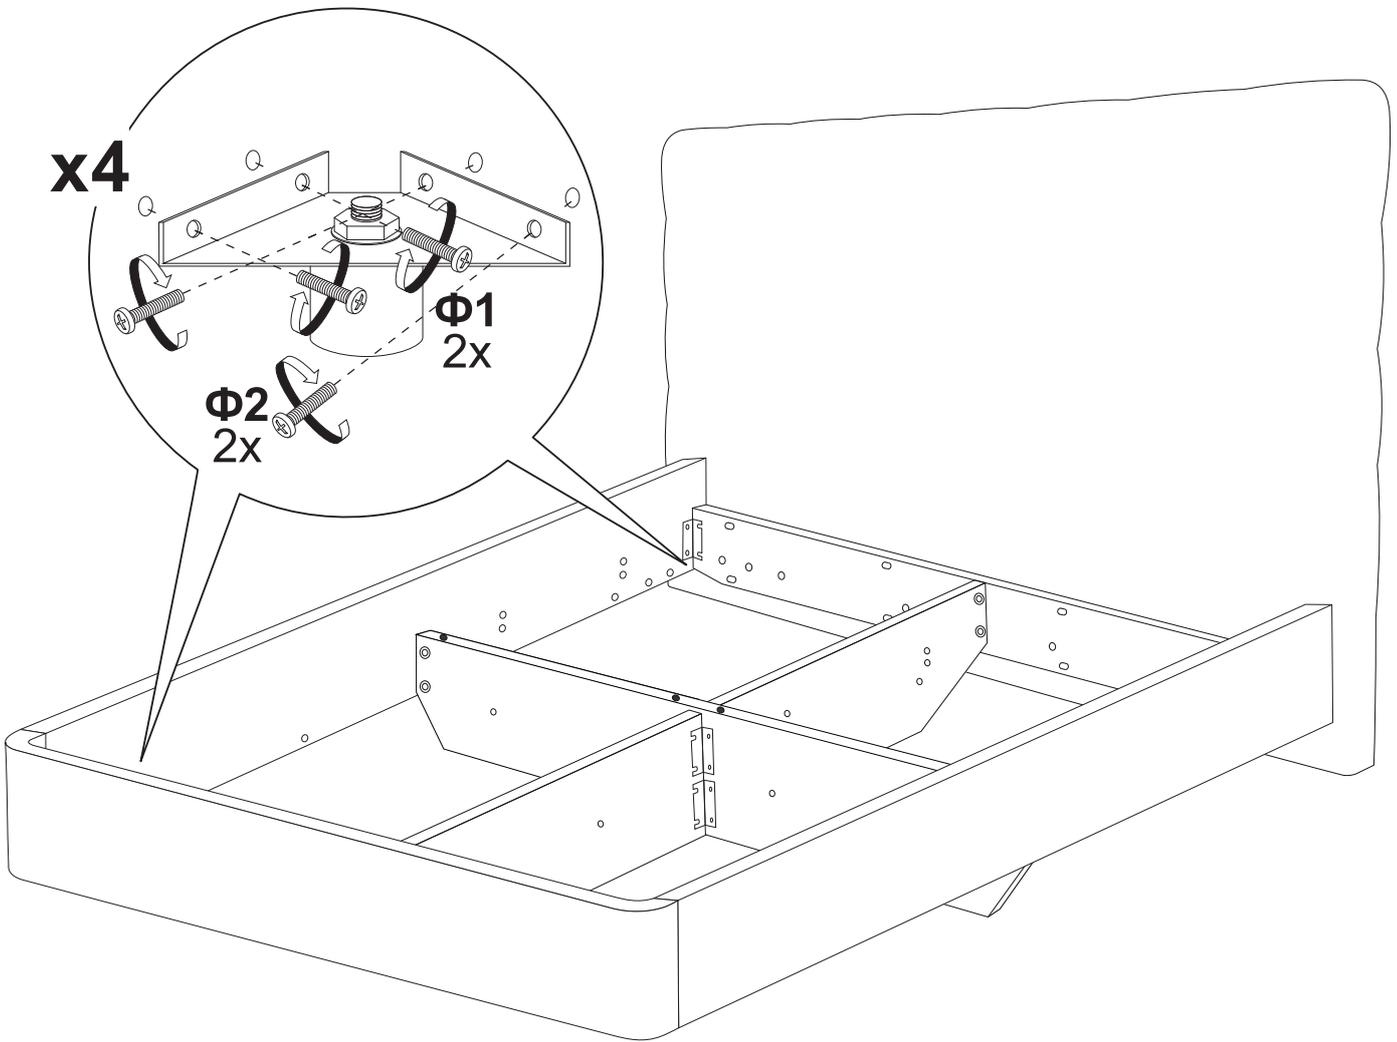

10

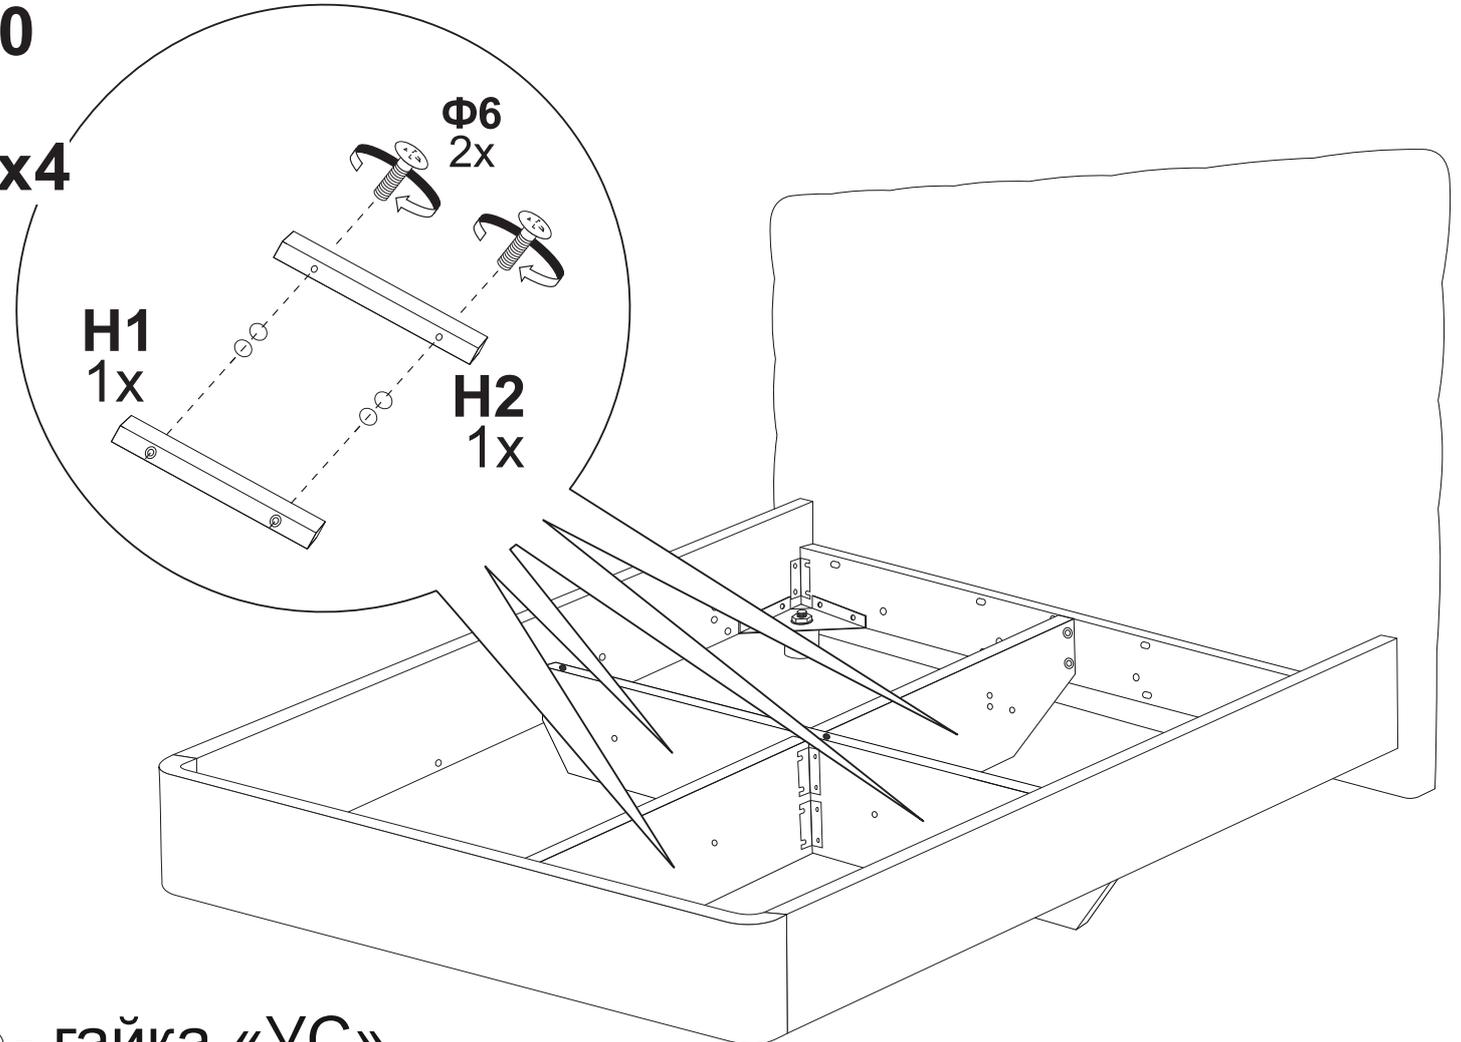


⊙ - гайка «УС»
 ○ - гайки «УС» нет

11

x8

Φ4, Φ5
2x 2x

H2
1x

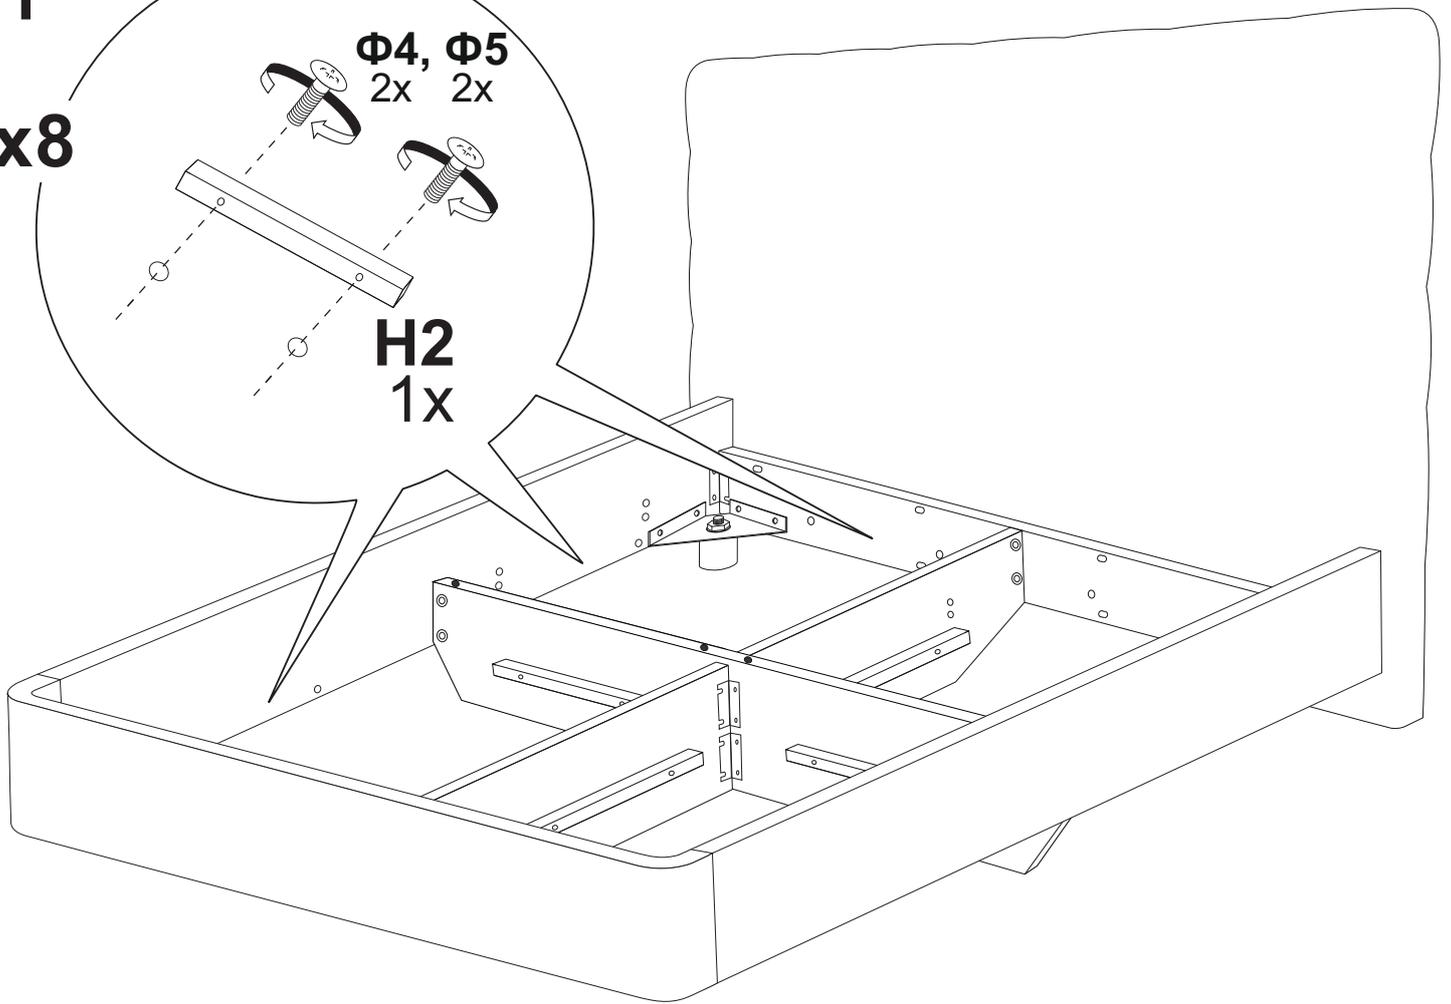

12

П !!!

x2

1x

1x

1x



1x

1x

1x

Φ3
4x


1x

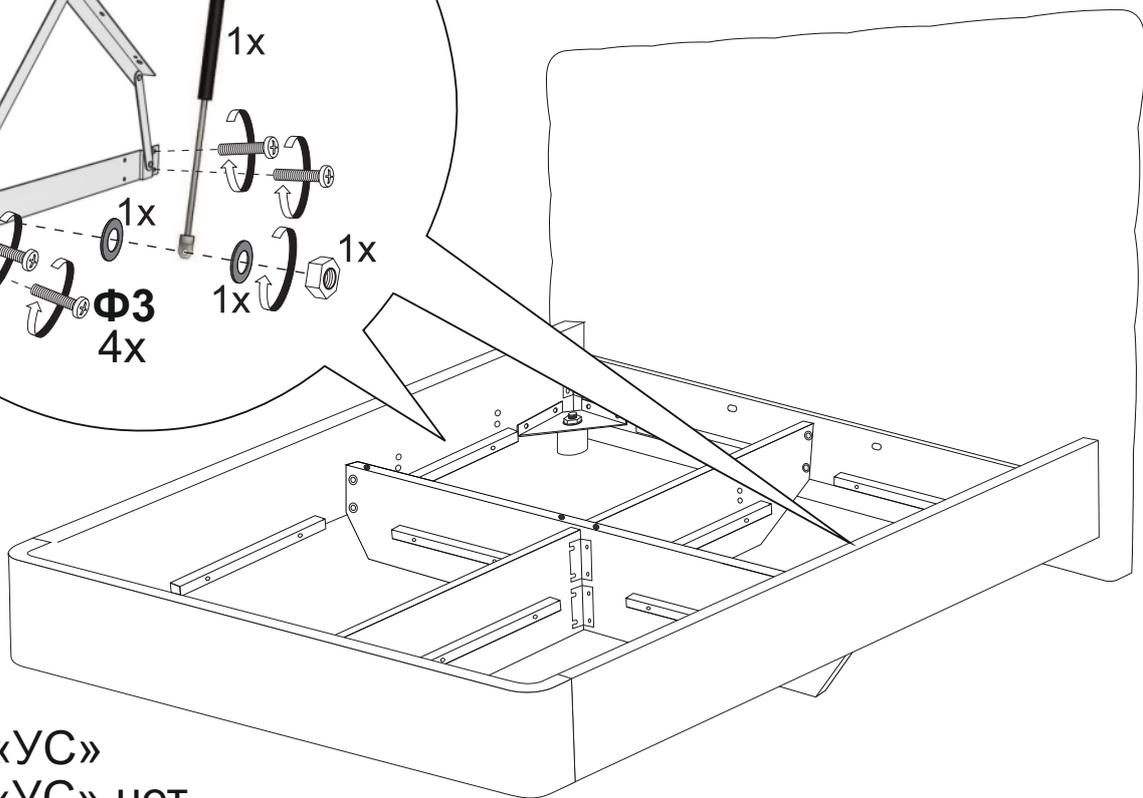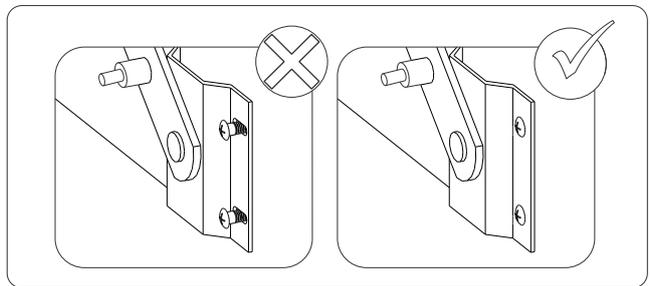

◎ - гайка «УС»
○ - гайки «УС» нет

12

П

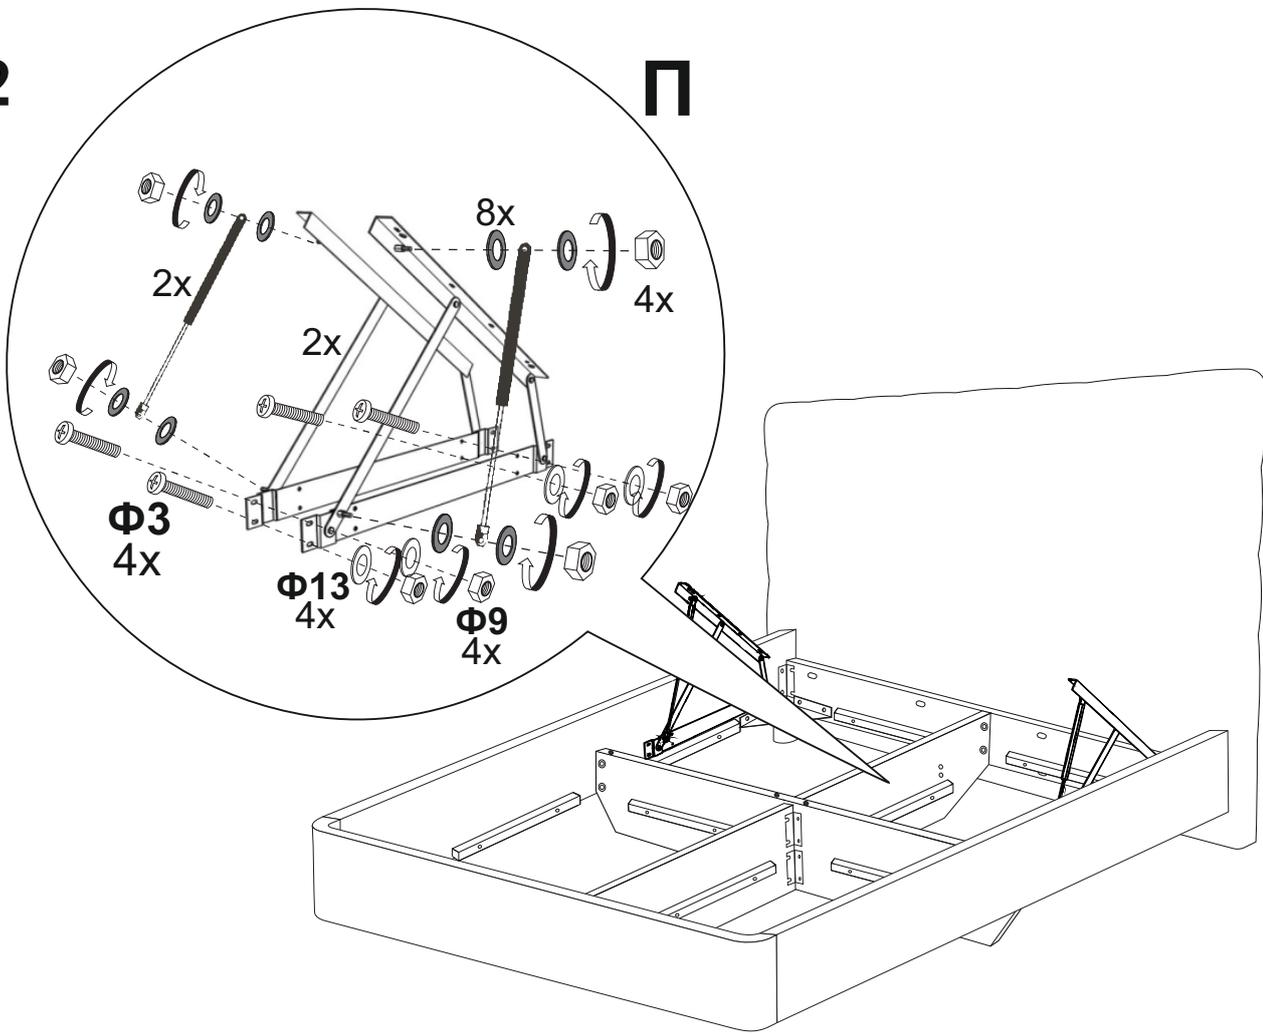

13


П
x4

П
2x

П
2x

П
2x


Р
x2



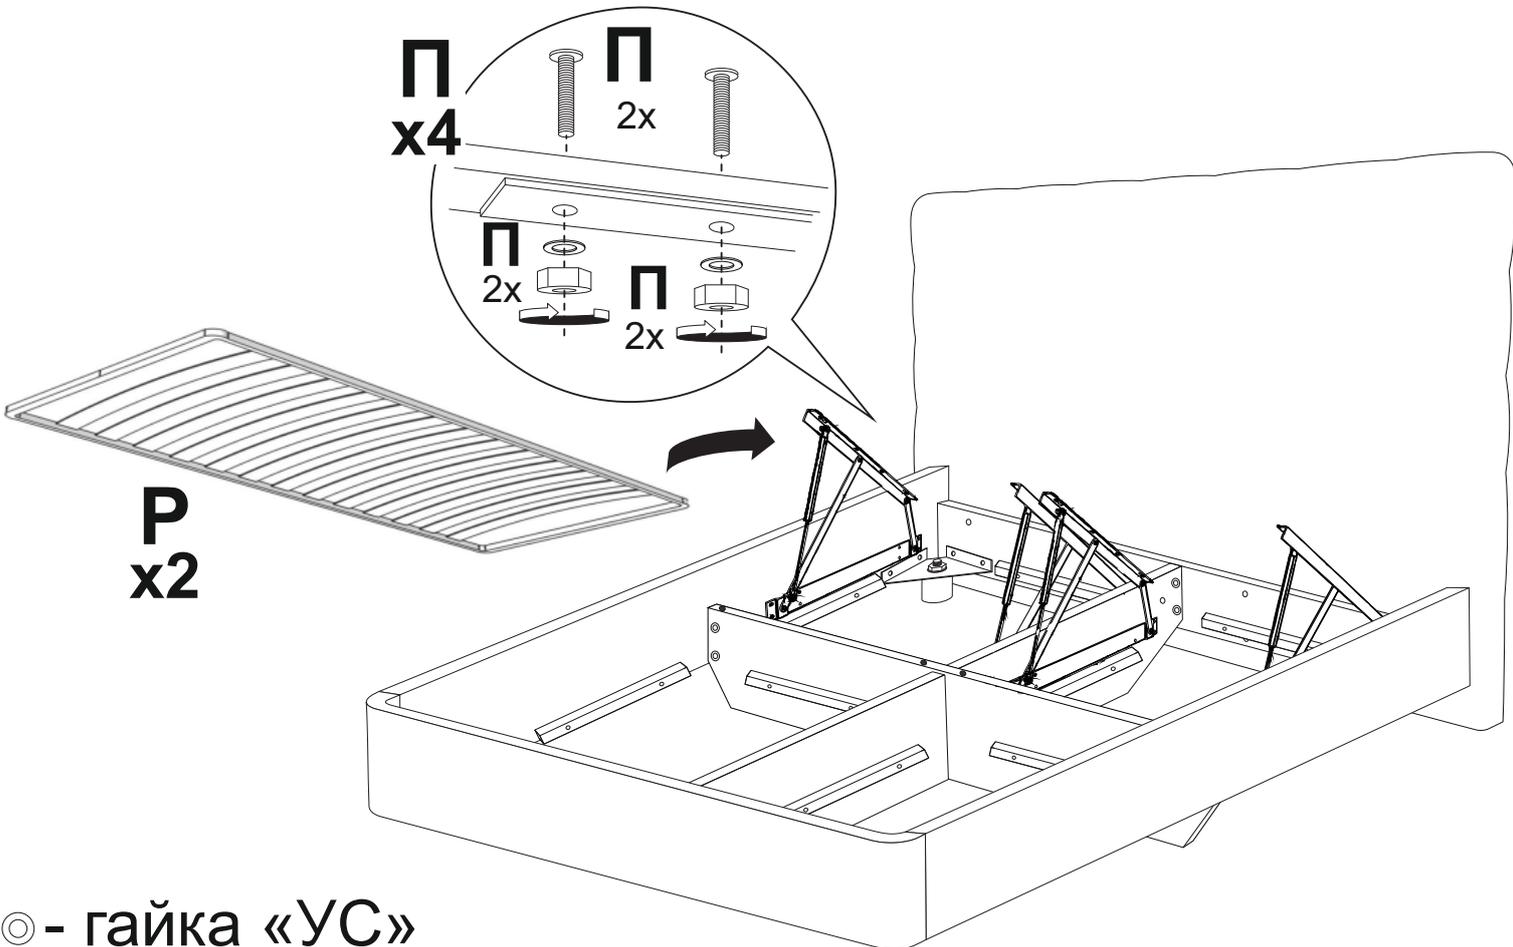




◎ - гайка «УС»

○ - гайки «УС» нет

14

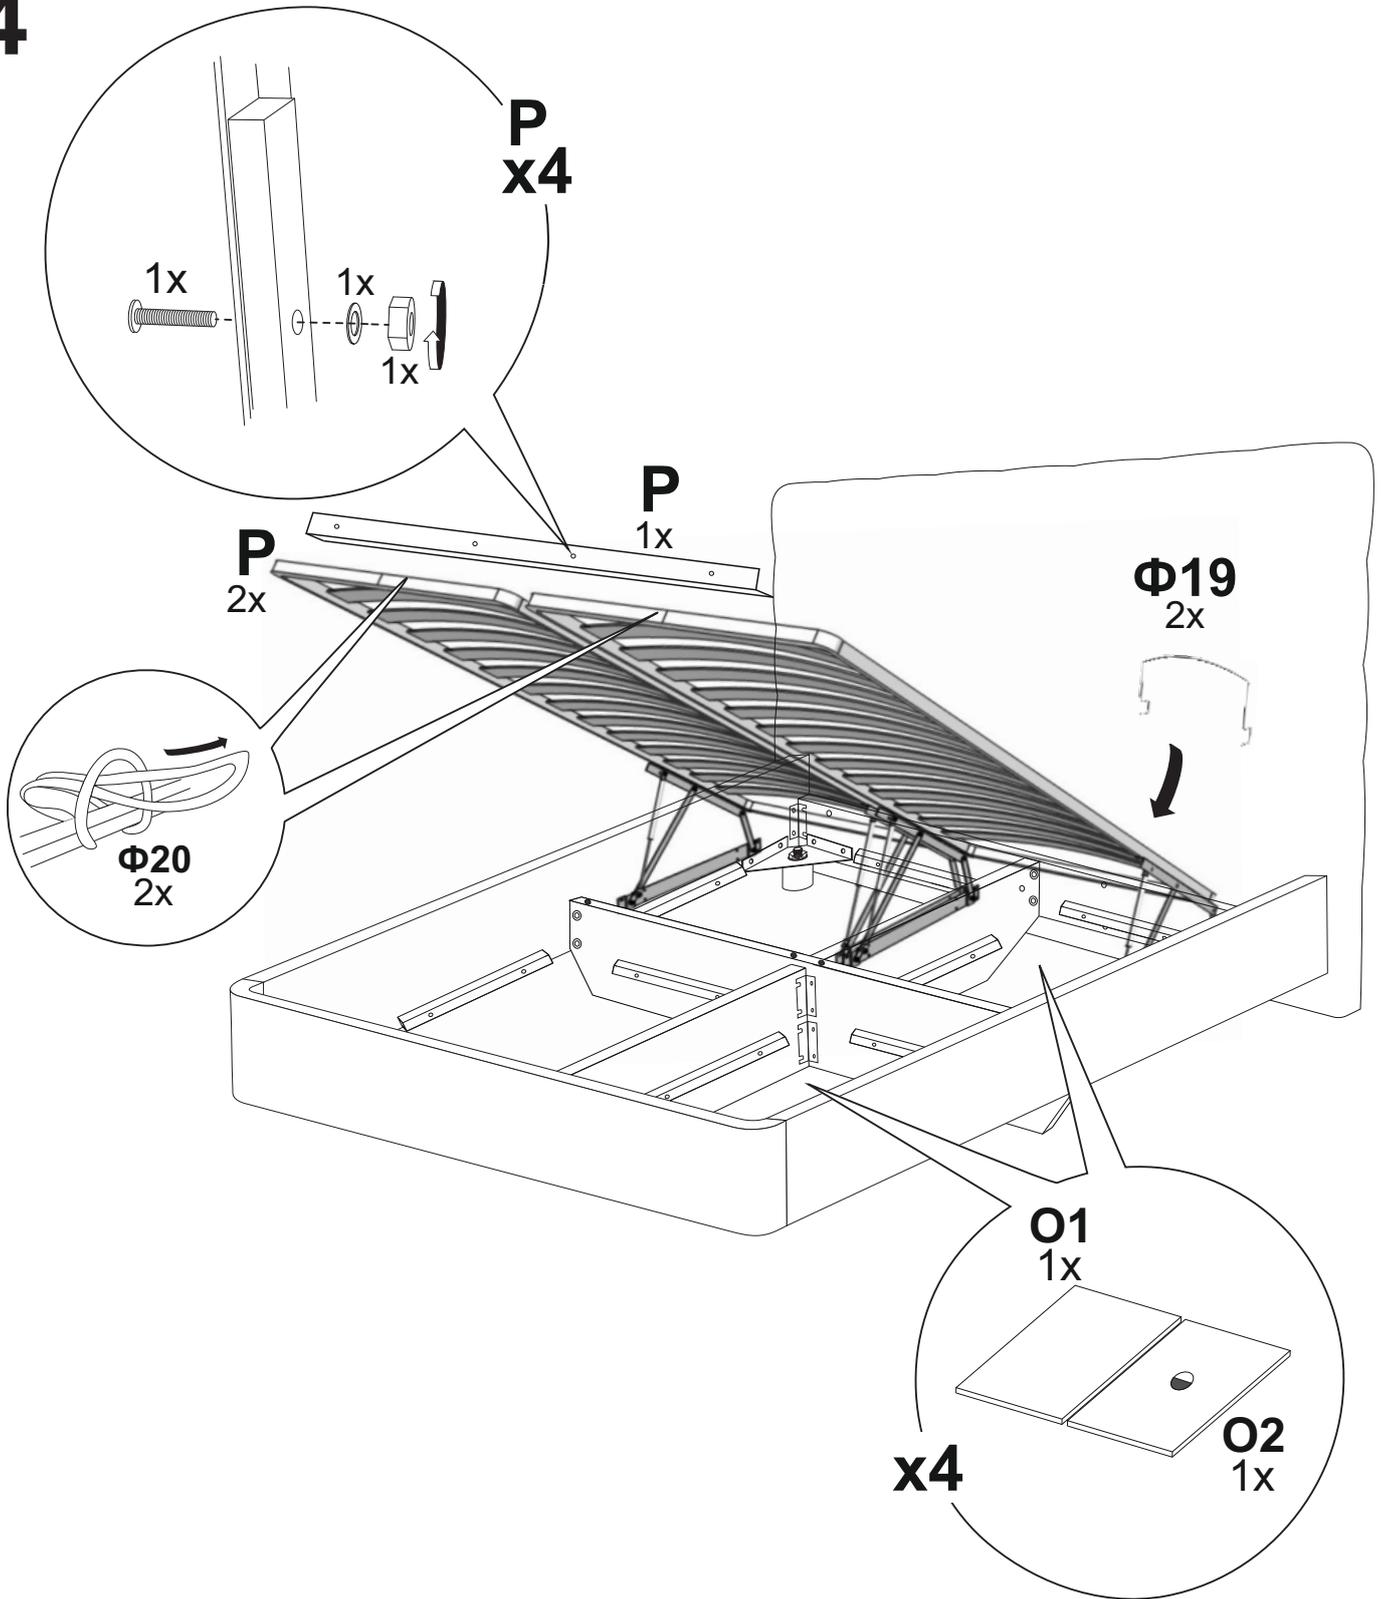

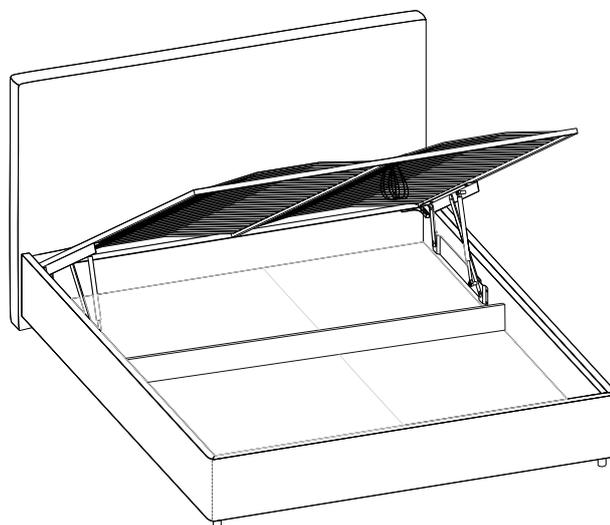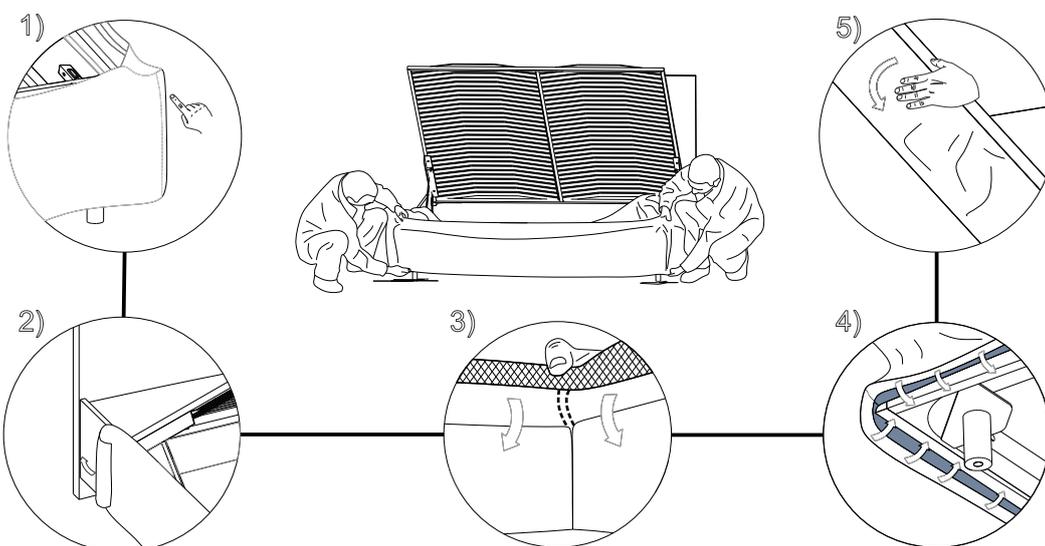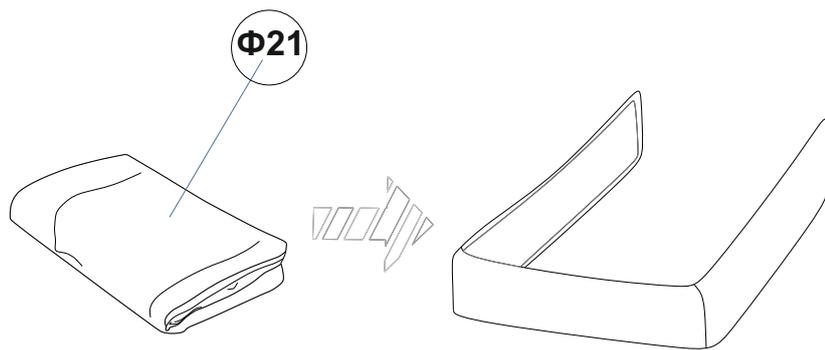

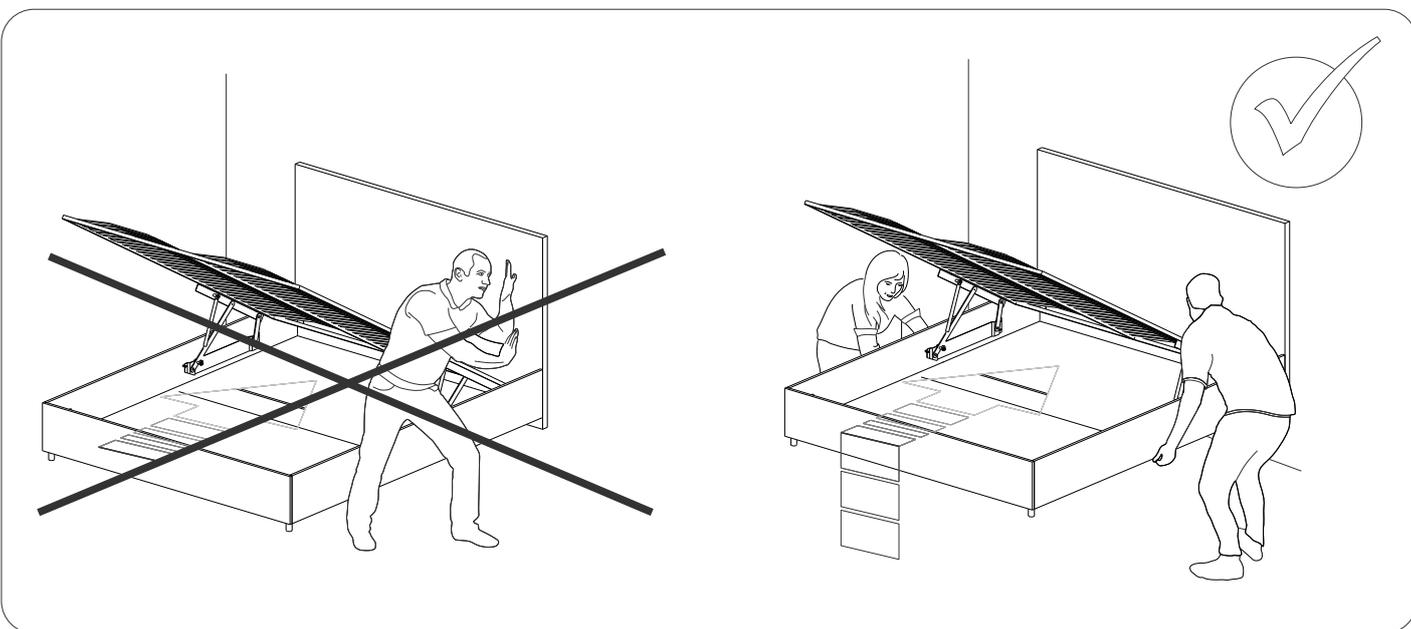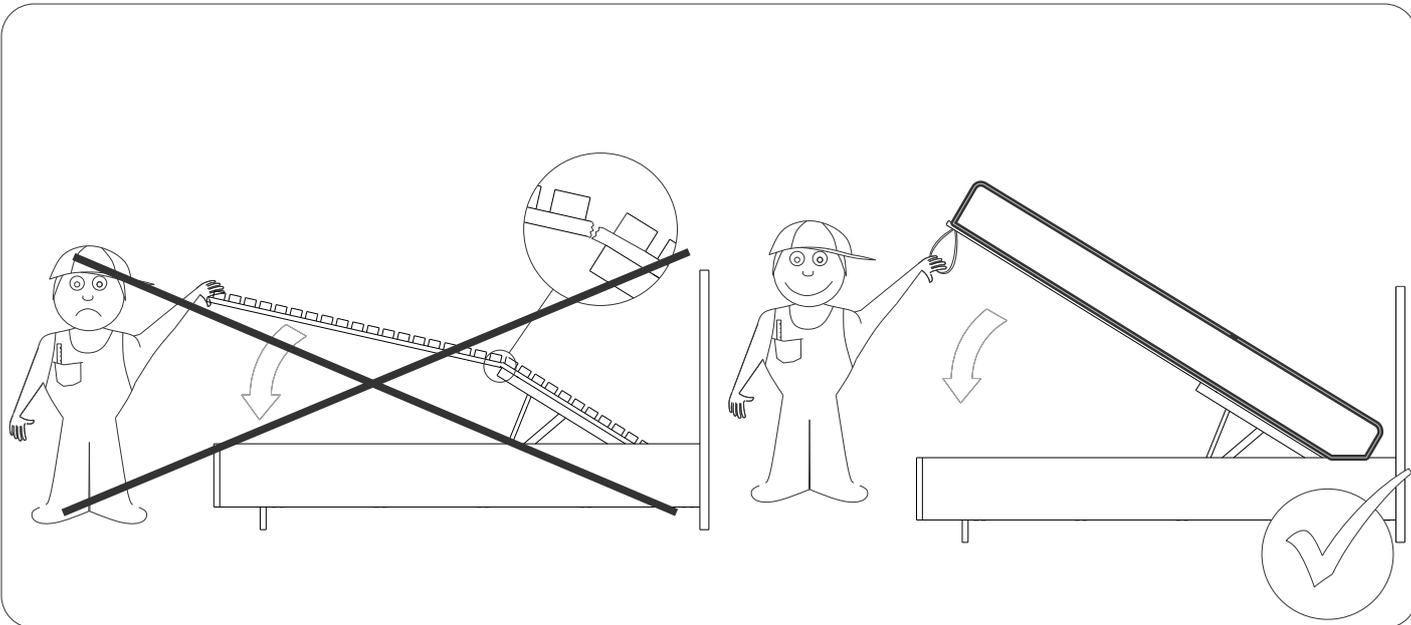

Следует проводить смазку
трущихся частей механизма
не реже 2 раз в год

